



## Heatsink Protrusion Attachment

### <FR-A8CN01 to 09>

Thank you for choosing this Mitsubishi inverter option unit.

This Instruction Manual provides handling information and precautions for use of the equipment. Incorrect handling might cause an unexpected fault. Before using this product, always read this Instruction Manual carefully to use this product correctly.

Please forward this Instruction Manual to the end user.

#### **SAFETY INSTRUCTIONS**

- ⚠ While power is ON or for some time after power-OFF, do not touch the inverter and attachment since they will be extremely hot. Touching these devices may cause a burn.
- ⚠ The product must be transported in correct method that corresponds to the weight. Failure to do so may lead to injuries. Special attention must be paid to the edges of the product.
- ⚠ Foreign conductive objects must be prevented from entering the inverter. That includes screws and metal fragments or other flammable substance such as oil.

This attachment allows approximately 70% of the heat generated by the inverter to be radiated outside the enclosure by protruding the inverter heatsink section out from the rear side of the enclosure.

## **1 ENCLOSED ITEMS**

Check the attachment model, and check that the following items are enclosed with the indicated quantity.

Symbol	Enclosed items	Attachment model								
		FR-A8CN01	FR-A8CN02	FR-A8CN03	FR-A8CN04	FR-A8CN05	FR-A8CN06	FR-A8CN07	FR-A8CN08	FR-A8CN09
a	Upper installation frame	1	1	1	1	1	1	1	1	1
b	Upper cover	1	1	1	1	1	1	1	1	1
c	Lower installation frame	1	1	1	1	1	*1	*1	*1	*1
d	Upper/lower frame installation screw	4 (M5-12)	4 (M5-10)	4 (M5-10)	4 (M8-16)	*2	*2	*2	*2	*2
e	Cover installation screw	2 (M4-8)	3 (M4-10)	3 (M4-10)	4 (M4-10)					
f	Right installation frame	—	—	—	—	1	1	1	1	1
g	Left installation frame	—	—	—	—	1	1	1	1	1
h	Left/right frame installation screw	—	—	—	—	4 (M4-10)				

\*1 For the FR-A8CN06 to 09, the lower installation frame (c) is not enclosed. Use the inverter's lower installation frame by changing its installation position.



\*2 Use the fixing screws for the standard installation feet of the inverter.


## 2 APPLICABLE MODELS

Applicable model	Applicable attachment								
	FR-A8CN01	FR-A8CN02	FR-A8CN03	FR-A8CN04	FR-A8CN05	FR-A8CN06	FR-A8CN07	FR-A8CN08	FR-A8CN09
FR-A820	00105(1.5K) 00167(2.2K) 00250(3.7K)	00340(5.5K) 00490(7.5K)	00630(11K)	00770(15K) 00930(18.5K) 01250(22K)	01540(30K)	01870(37K) 02330(45K)	03160(55K)	03800(75K) 04750(90K)	—
FR-A840	00023(0.4K) 00038(0.75K) 00052(1.5K) 00083(2.2K) 00126(3.7K)	00170(5.5K) 00250(7.5K)	00310(11K) 00380(15K)	00470(18.5K) 00620(22K)	00770(30K)	00930(37K) 01160(45K) 01800(55K)	—	03250(110K) 03610(132K)	02160(75K) 02600(90K)


## 3 ENCLOSURE CUT DIMENSIONS

(1) Cut an enclosure to the following dimensions according to the inverter capacity.


FR-A8CN01

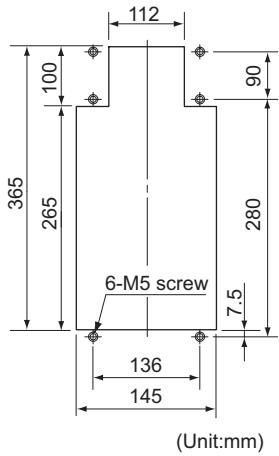


FR-A8CN02

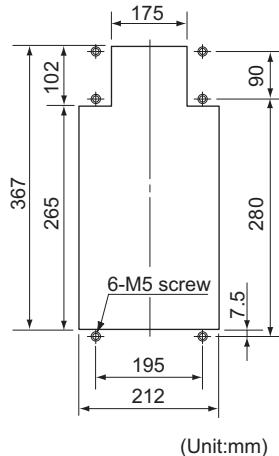


FR-A8CN03

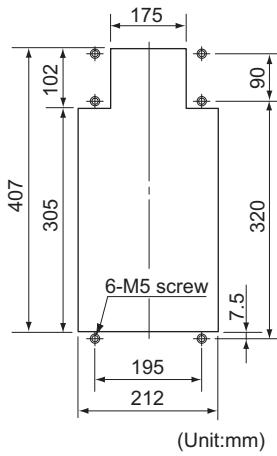


FR-A8CN04

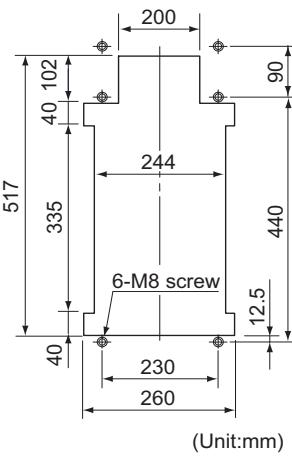


FR-A8CN05

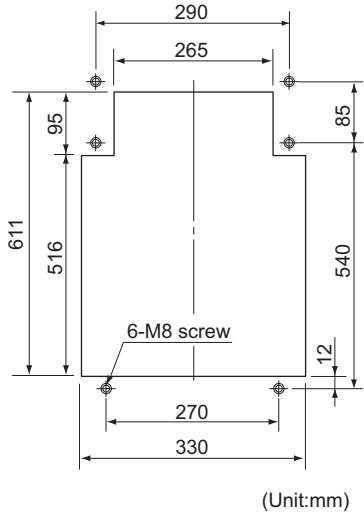


FR-A8CN06

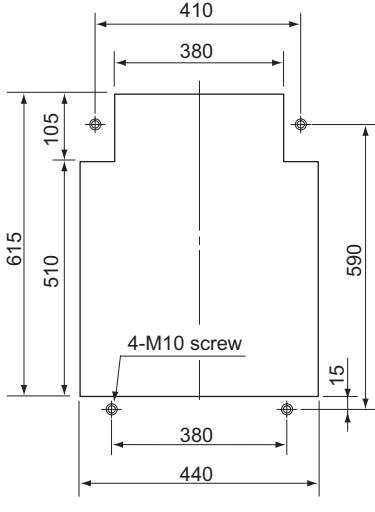


FR-A8CN07

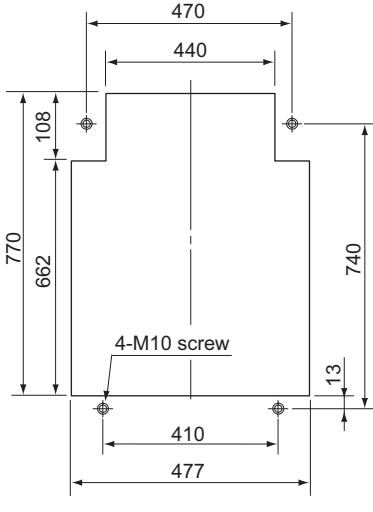

FR-A8CN08

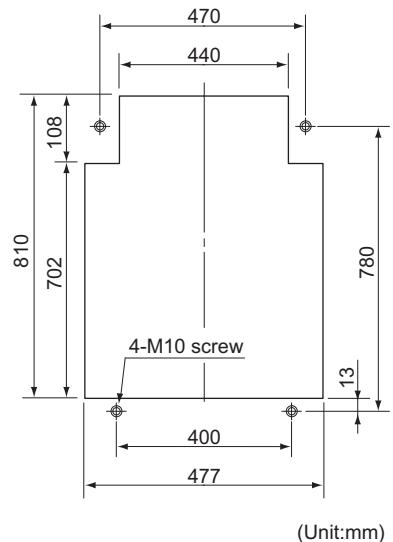

FR-A8CN09

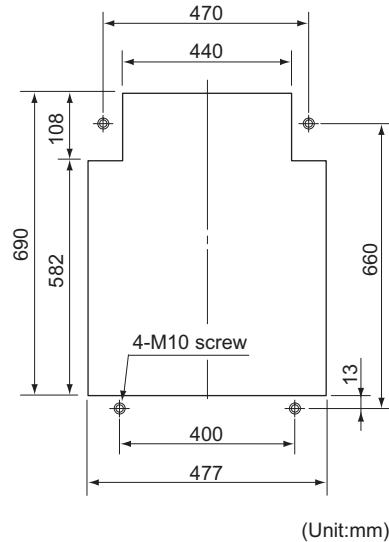

- (2) Refer to "INSTALLATION PROCEDURE" on [page 5](#) to assemble the attachment to the inverter. After assembly, install the inverter in the enclosure.


**NOTE:**

- Since the cooling section, which comes out of the enclosure, has a cooling fan, avoid environment with water drops, oil mist, dust, etc.
- Be careful not to drop screws, dust, etc. into the inverter and cooling fan section.
- A gap of approximately 1 mm is left between the FR-A8CN and the inverter. (The inverter is not in an enclosed condition.)


## 4 OUTLINE DIMENSION DRAWINGS

(-----: Enclosure cut dimensions)


FR-A8CN01

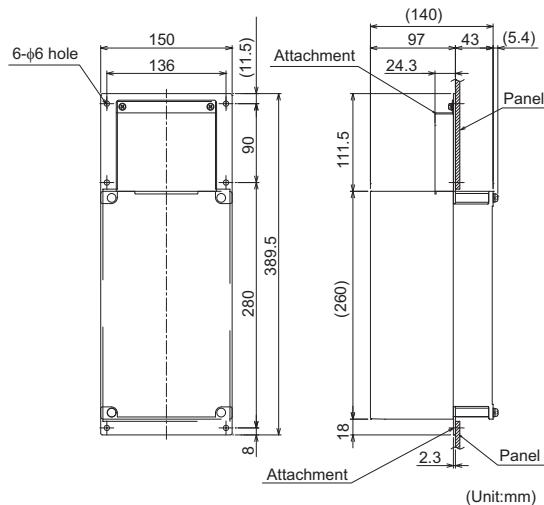


FR-A8CN02

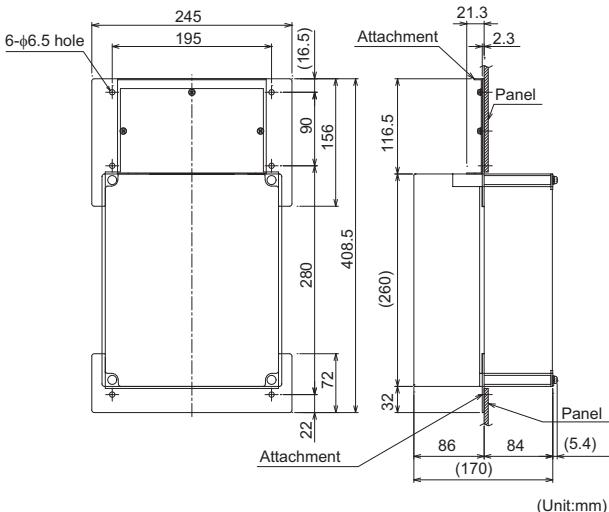


FR-A8CN03

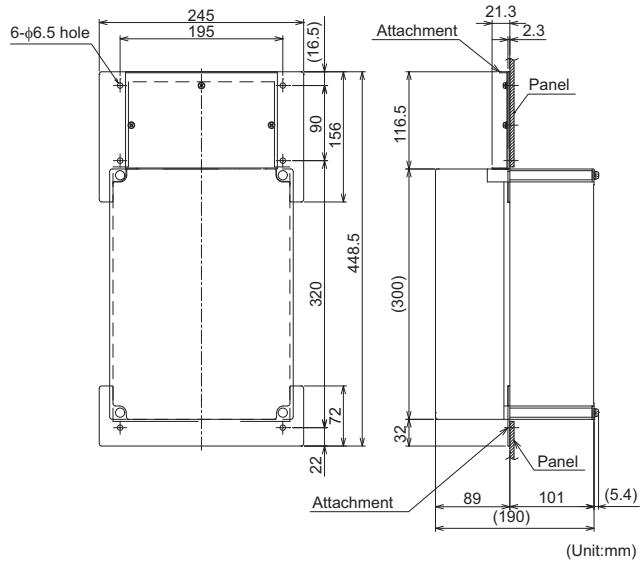


FR-A8CN04

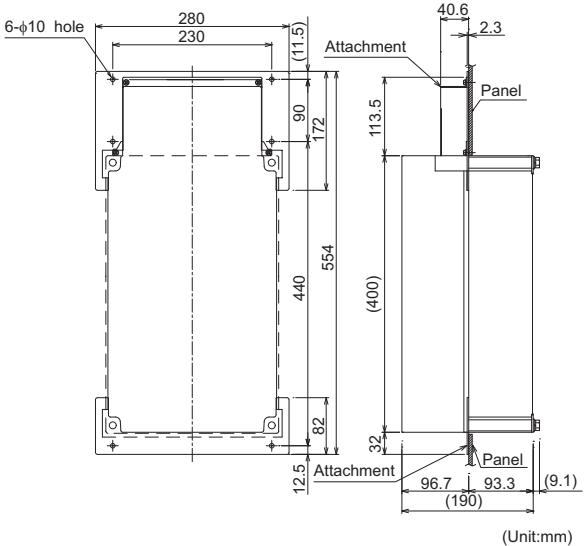


FR-A8CN05

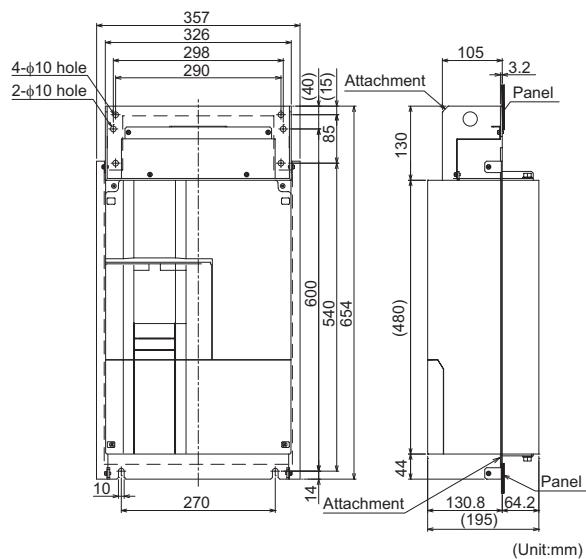


FR-A8CN06

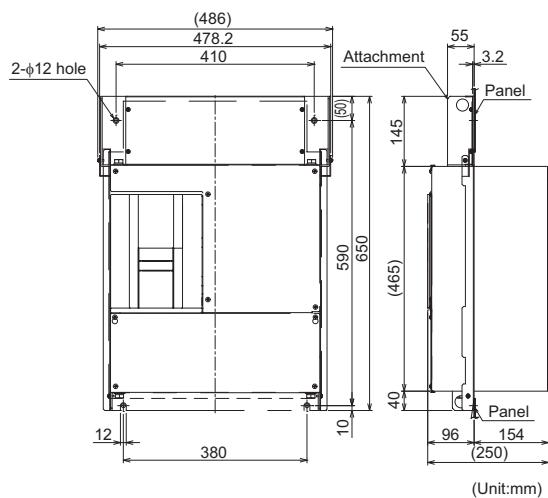


FR-A8CN07

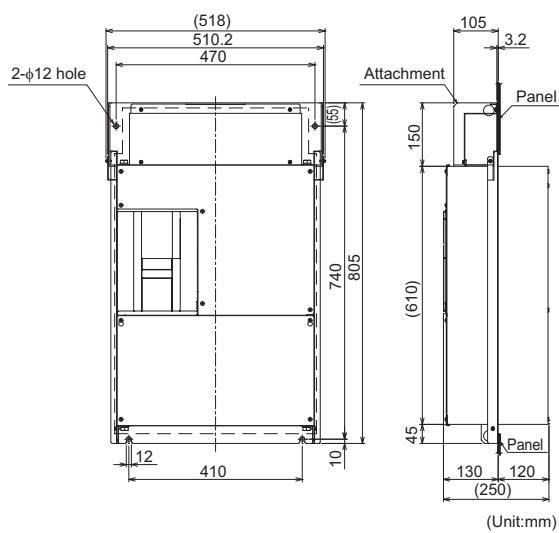

FR-A8CN08

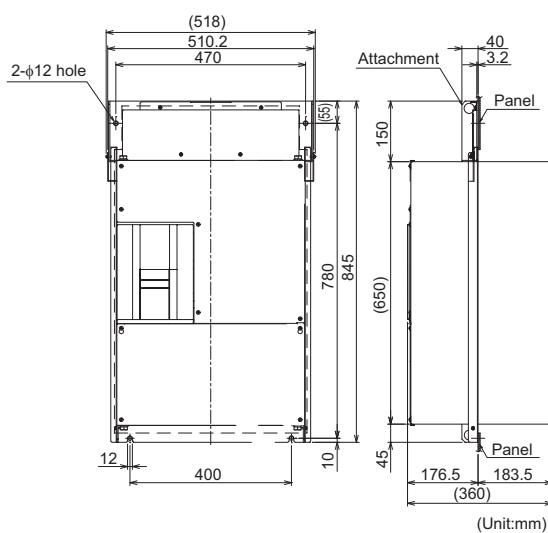


FR-A8CN09

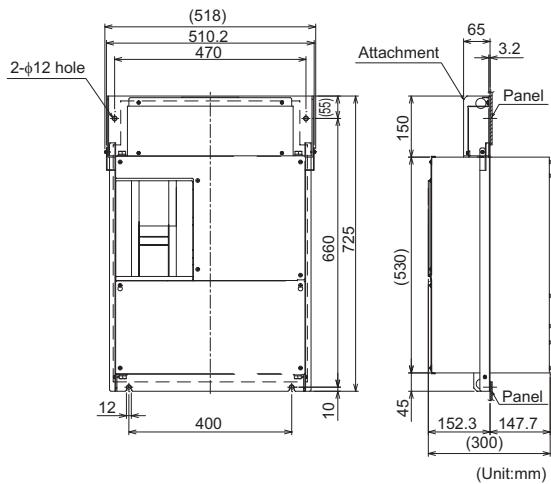


## 5 INSTALLATION PROCEDURE


FR-A8CN01

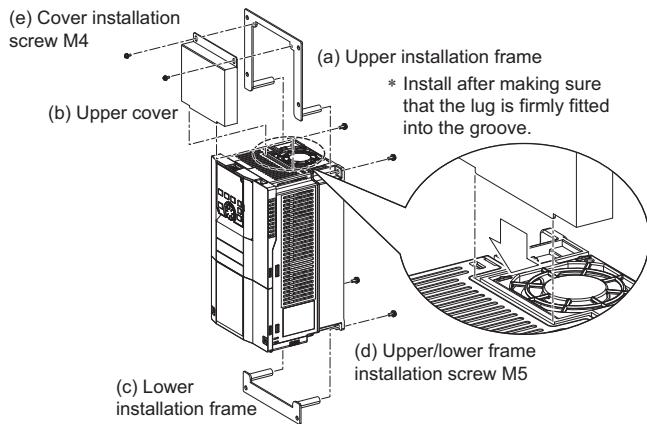


FR-A8CN02

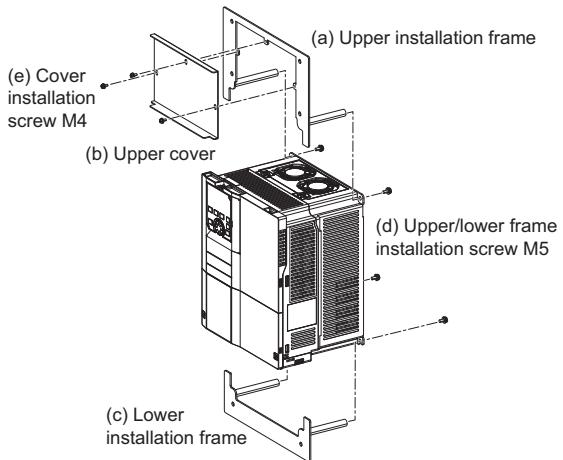


FR-A8CN03

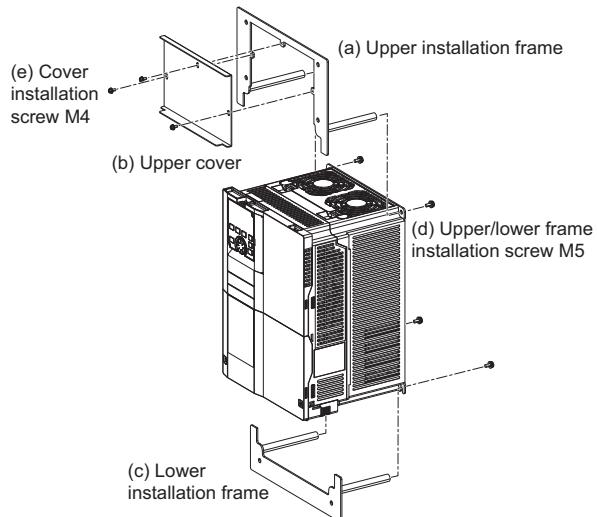


FR-A8CN04

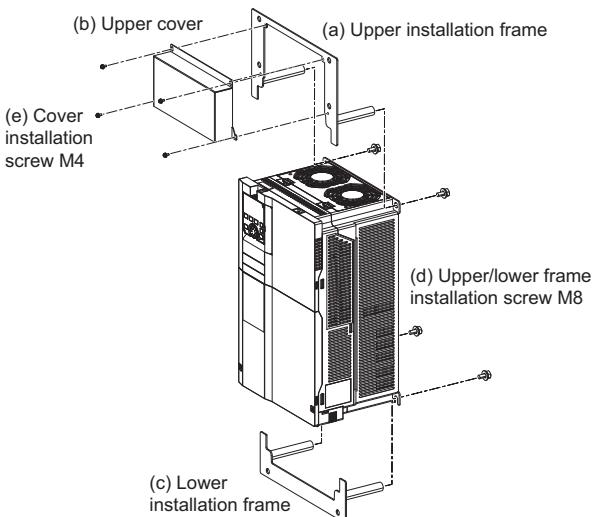


FR-A8CN05

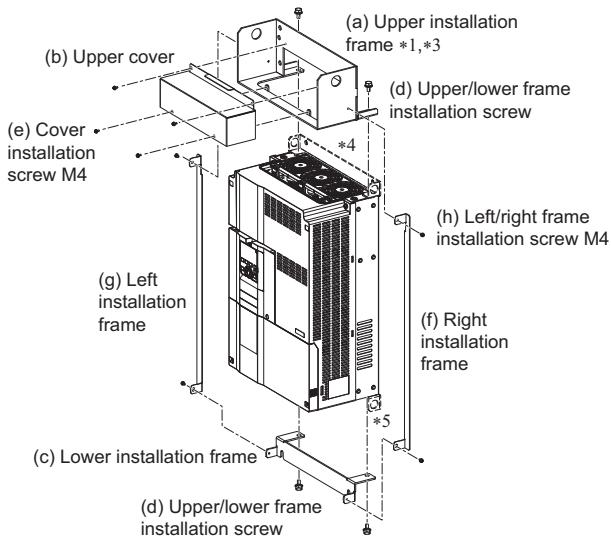


FR-A8CN06

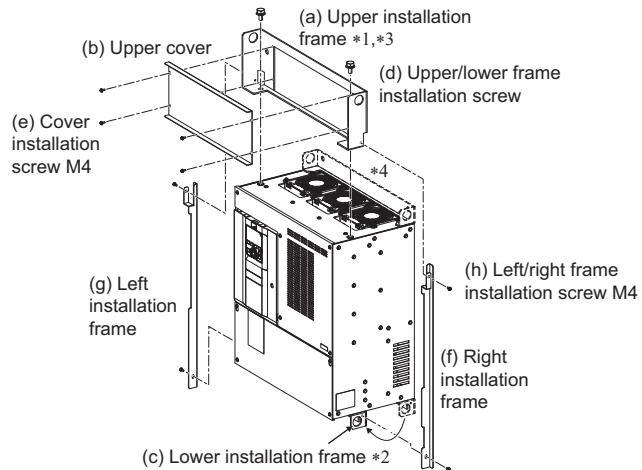


FR-A8CN07

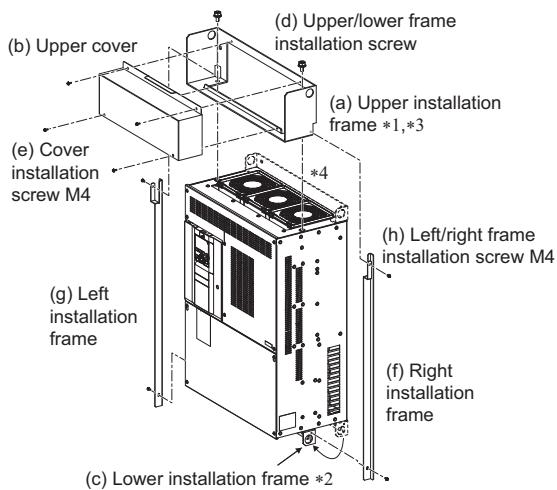

FR-A8CN08

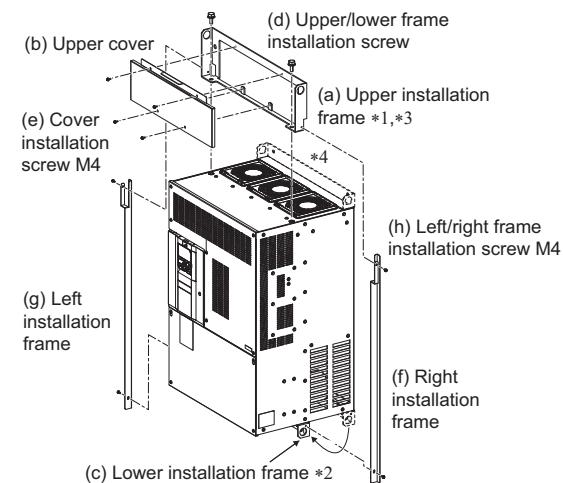


FR-A8CN09

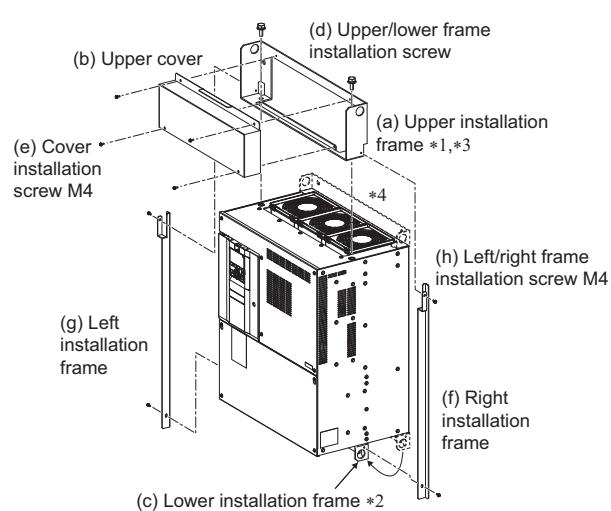

\*1 When carrying the inverter, do not hold the upper section of the upper installation frame (a). Doing so may change the frame shape.

\*2 For the FR-A8CN06 to 09, change the position of the standard installation feet/lower section and use it instead of the lower installation frame (c).

- \*3 For the FR-A8CN05 to 09, fit the upper cover (b) to the upper installation frame (a) first, and then install the upper installation frame (a) to the inverter. When the upper cover (b) is installed to the upper installation frame (a), a gap may sometimes remain between the lower part of the upper cover (b) and the upper installation frame (a). Install the upper cover after checking that no gap exists.

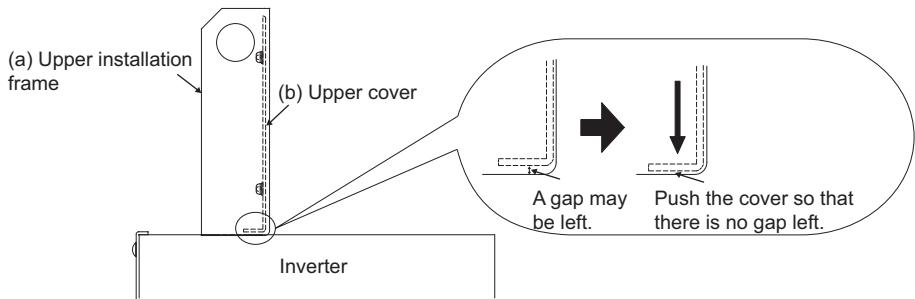

- \*4 Remove the standard installation foot/upper section of the inverter. Use the fixing screws for the standard installation feet to fix the upper installation frame.  
 \*5 Remove the standard installation foot/lower section of the inverter. Use the fixing screws for the standard installation feet to fix the lower installation frame.

 **NOTE:**

- When replacing the cooling fan, remove the upper cover (b) and then replace the cooling fan from the opening. (For details on the cooling fan replacement, refer to the Instruction Manual of the inverter.)

## 6 DEPTH DIMENSIONS

When a 700 series option unit is replaced with an 800 series option unit, depth requirements outside and inside the enclosure differ as shown in the shaded area of the table below.

The diagram shows a side view of an inverter unit mounted on a 'Panel'. Two dimensions are labeled: 'D' for the total height of the unit, and 'D1' for the distance from the top of the unit to the top of the panel. Below the diagram is a table comparing these dimensions for various models before and after replacement.

Attachment model	Before replacement		After replacement		
	D (mm)	D1 (mm)	Attachment model	D (mm)	D1 (mm)
FR-A7CN01	97	48.4	FR-A8CN01	97	48.4
FR-A7CN02	86	89.4	FR-A8CN02	86	89.4
FR-A7CN03	89	106.4	FR-A8CN03	89	106.4
FR-A7CN04	88.5	110.6	FR-A8CN04	96.7	102.4
FR-A7CN05, 06	123.5	71.5	FR-A8CN05	130.8	64.2
FR-A7CN07	96	154	FR-A8CN06	96	154
FR-A7CN11	97	153	FR-A8CN07	130	120
FR-A7CN10	176.5	183.5	FR-A8CN08	176.5	183.5
FR-A7CN08, 09	116.5	183.5	FR-A8CN09	152.3	147.7



HEAD OFFICE: TOKYO BUILDING 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN



HEADQUARTERS		EUROPEAN REPRESENTATIVES		EUROPEAN REPRESENTATIVES		EURASIAN REPRESENTATIVES	
Mitsubishi Electric Europe B.V. Gothaer Straße 8 <b>D-40880 Ratingen</b> Phone: +49 (0)2102 / 486-0 Fax: +49 (0)2102 / 486-1120	EUROPE	GEVA Wiener Straße 89 <b>A-2500 Baden</b> Phone: +43 (0)2252 / 85 55 20 Fax: +43 (0)2252 / 488 60	AUSTRIA	Beijer Electronics UAB Goštautų g. 3 <b>LT-48324 Kaunas</b> Phone: +370 37 262707 Fax: +370 37 455605	LITHUANIA	TOO Kazpromavtomatika UL. ZHAMBYLA 28, <b>KAZ-00017 Karaganda</b> Phone: +7 7212 / 50 10 00 Fax: +7 7212 / 50 11 50	KAZAKHSTAN
Mitsubishi Electric Europe B.V. Radlická 751/113e Avenir Business Park <b>CZ-158 00 Praha 5</b> Phone: +420 251 551 470 Fax: +420 251 551 471	CZECH REP.	OOO TECHNIKON Prospect Nezavisimosti 177-9 <b>BY-220125 Minsk</b> Phone: +375 (0)17 / 393 1177 Fax: +375 (0)17 / 393 0081	BELARUS	ALFATRADE Ltd. 99, Paola Hill <b>Malta-Paola PLA 1702</b> Phone: +356 (0)21 / 697 816 Fax: +356 (0)21 / 697 817	MALTA	I.C. SYSTEMS Ltd. 23 Al-Saad-Al-Alee St. <b>EG-Sarayat, Maadi, Cairo</b> Phone: +20 (0) 2 / 235 98 548 Fax: +20 (0) 2 / 235 96 625	Egypt
Mitsubishi Electric Europe B.V. 25, Boulevard des Bouvets <b>F-92741 Nanterre Cedex</b> Phone: +33 (0)1 / 55 68 55 68 Fax: +33 (0)1 / 55 68 57 57	FRANCE	ESCO DRIVES Culliganlaan 3 <b>BE-1831 Diegem</b> Phone: +32 (0)2 / 717 64 60 Fax: +32 (0)2 / 717 64 61	BELGIUM	INTEHSIS SRL bld. Traian 23/1 <b>MD-2060 Kishinev</b> Phone: +373 (0)22 / 66 4242 Fax: +373 (0)22 / 66 4280	MOLDOVA	SHERF Motion Techn. Ltd. Rehov Hamerkava 19 <b>IL-58851 Holon</b> Phone: +972 (0)3 / 559 54 62 Fax: +972 (0)3 / 556 01 82	ISRAEL
Mitsubishi Electric Europe B.V. Westgate Business Park, Ballymount <b>IRL-Dublin 24</b> Phone: +353 (0)1 4198800 Fax: +353 (0)1 4198890	IRELAND	KONING & HARTMAN B.V. Woluweelaan 31 <b>BE-1800 Vilvoorde</b> Phone: +32 (0)2 / 257 02 40 Fax: +32 (0)2 / 257 02 49	BELGIUM	HIFLEX AUTOM. B.V. Wolweverstraat 22 <b>NL-2984 CD Ridderkerk</b> Phone: +31 (0)180 / 46 60 04 Fax: +31 (0)180 / 44 23 55	NETHERLANDS	CEG LIBAN Cebaco Center/Block A Autostrade DORA <b>Lebanon-Beirut</b> Phone: +961 (0)1 / 240 445 Fax: +961 (0)1 / 240 193	LEBANON
Mitsubishi Electric Europe B.V. Viale Colleoni 7 Palazzo Sirio <b>I-20864 Agrate Brianza (MB)</b> Phone: +39 039 / 60 53 1 Fax: +39 039 / 60 53 312	ITALY	INEA RBT d.o.o. Stegne 11 <b>SI-1000 Ljubljana</b> Phone: +386 (0)1 / 513 8116 Fax: +386 (0)1 / 513 8170	BOSNIA AND HERZEGOVINA	IMTECH MARINE & OFFSHORE B.V. Sluisjesdijk 155 <b>NL-3087 AG Rotterdam</b> Phone: +31 (0)10 / 487 19 11 Fax: +31 (0)10 / 487 1692	NETHERLANDS	ADROIT TECHNOLOGIES 20 Waterford Office Park 189 Witkoppen Road <b>ZA-Fourways</b> Phone: +27 (0)11 / 658 8100 Fax: +27 (0)11 / 658 8101	SOUTH AFRICA
Mitsubishi Electric Europe B.V. Nijverheidsweg 23a <b>NL-3641 RP Mijdrecht</b> Phone: +31 (0) 297250350	NETHERLANDS	AKHNATON 4, Andrei Ljapchev Blvd., PO Box 21 <b>BG-1756 Sofia</b> Phone: +359 (0)2 / 817 6000 Fax: +359 (0)2 / 97 44 06 1	BULGARIA	KONING & HARTMAN B.V. Energieweg 1 <b>NL-2627 AP Delft</b> Phone: +31 (0)15 260 99 06 Fax: +31 (0)15 261 9194	NETHERLANDS	Beijer Electronics AS Postboks 487 <b>NO-3002 Drammen</b> Phone: +47 (0)32 / 24 30 00 Fax: +47 (0)32 / 84 85 77	
Mitsubishi Electric Europe B.V. ul. Krakowska 50 <b>PL-32-083 Balice</b> Phone: +48 (0) 12 630 47 00 Fax: +48 (0) 12 630 47 01	POLAND	INEA CR Losinjska 4 a <b>HR-1000 Zagreb</b> Phone: +385 (0)1 / 36 940 -01 / -02 / -03 Fax: +385 (0)1 / 36 940 -03	CROATIA	Fonseca S.A. Kafkova 1853/3 <b>CZ-702 00 Ostrava 2</b> Phone: +420 595 691 150 Fax: +420 595 691 199	CZECH REPUBLIC	Portuguese Representative R. João Francisco do Casal 87/89 <b>PT-3801-997 Aveiro, Esgueira</b> Phone: +351 (0)234 / 303 900 Fax: +351 (0)234 / 303 910	
Mitsubishi Electric Europe B.V. 52, bld. 3 Kosmodamianskaya nab 8 floor <b>RU-115054 Moscow</b> Phone: +7 495 / 721 2070 Fax: +7 495 / 721 2071	RUSSIA	AutoCont C. S. S.R.O. Kafkova 1853/3 <b>CZ-702 00 Ostrava 2</b> Phone: +420 595 691 150 Fax: +420 595 691 199	CZECH REPUBLIC	INEA SR d.o.o. Theilgaards Torv 1 <b>DK-4000 Roskilde</b> Phone: +45 (0)46 / 75 76 66 Fax: +45 (0)46 / 75 56 26	DENMARK	SIRIUS TRADING & SERVICES SRL Allee Lacul Morii Nr. 3 <b>RO-060841 Bucuresti, Sector 6</b> Phone: +40 (0)21 / 430 40 06 Fax: +40 (0)21 / 430 40 02	
Mitsubishi Electric Europe B.V. Carretera de Rubí 76-80 Apdo. 420 <b>E-08190 Sant Cugat del Vallés (Barcelona)</b> Phone: +34 (0) 93 / 5653131 Fax: +34 (0) 93 / 5891579	SPAIN	HANS FØLSGAARD A/S Lykkegårdsvej 17 <b>DK-4600 Køge</b> Phone: +45 4320 8600 Fax: +45 4396 8855	DENMARK	INEA SR d.o.o. Ul. Karadjordjeva 12/217 <b>SER-11300 Smederevo</b> Phone: +386 (026) 461 54 01	ROMANIA	SIRIUP SK (Západné Slovensko) Jána Derku 1671 <b>SK-911 01 Trenčín</b> Phone: +421 (0)32 743 04 72 Fax: +421 (0)32 743 75 20	
Mitsubishi Electric Europe B.V. Fjellevägen 8 <b>SE-22736 Lund</b> Phone: +46 (0) 8 625 10 00 Fax: +46 (0) 46 39 70 18	SWEDEN	Beijer Electronics A/S Pärnu mnt.160i <b>EE-11317 Tallinn</b> Phone: +372 (0)6 / 51 81 40 Fax: +372 (0)6 / 51 81 49	ESTONIA	INEA RBT d.o.o. Stegne 11 <b>SI-1000 Ljubljana</b> Phone: +386 (0)1 / 513 8116 Fax: +386 (0)1 / 513 8170	SLOVENIA	INEA SR d.o.o. Im Schörli 5 <b>CH-8600 Dübendorf</b> Phone: +41 (0)44 / 802 28 80 Fax: +41 (0)44 / 802 28 28	
Mitsubishi Electric Turkey Elektrik Ürünleri A.Ş. Fabrika Otomasyonu Merkezi Şerifali Mahallesi Nutuk Sokak No.5 <b>TR-34775 Ümraniye-İSTANBUL</b> Phone: +90 (0)216 / 526 39 90 Fax: +90 (0)216 / 526 39 95	TURKEY	Beijer Electronics Eesti OÜ Pärnu mnt.160i <b>EE-11317 Tallinn</b> Phone: +372 (0)6 / 51 81 40 Fax: +372 (0)6 / 51 81 49	ESTONIA	OMNI RAY AG Box 426 <b>SE-20124 Malmö</b> Phone: +46 (0)40 / 35 86 00 Fax: +46 (0)40 / 93 23 01	SWEDEN	OMNI RAY AG Im Schörli 5 <b>CH-8600 Dübendorf</b> Phone: +41 (0)44 / 802 28 80 Fax: +41 (0)44 / 802 28 28	
Mitsubishi Electric Europe B.V. Travellers Lane <b>UK-Hatfield, Herts. AL10 8XB</b> Phone: +44 (0)1707 / 28 87 80 Fax: +44 (0)1707 / 27 86 95	UK	PROVENDOR OY Teljankatu 8 A3 <b>FIN-28130 Pori</b> Phone: +358 (0)2 / 522 3300 Fax: +358 (0)2 / 522 3322	FINLAND	UTECO A.B.E.E. 5, Mavrogenous Str. <b>GR-18542 Piraeus</b> Phone: +30 (0)211 / 1206-900 Fax: +30 (0)211 / 1206-999	GREECE	000 "CSC-AUTOMATION" 4-B, M. Raskovoy St. <b>UA-02660 Kiev</b> Phone: +380 (0)44 / 494 33 44 Fax: +380 (0)44 / 494 33 66	UKRAINE
Mitsubishi Electric Europe B.V. Dubai Silicon Oasis <b>United Arab Emirates - Dubai</b> Phone: +971 4 3724716 Fax: +971 4 3724721	UAE	MELTRADE Kft. Fertő utca 14. <b>HU-1107 Budapest</b> Phone: +36 (0)1 / 431-9726 Fax: +36 (0)1 / 431-9727	HUNGARY	Beijer Electronics SIA Ritausmas iela 23 <b>LV-1058 Riga</b> Phone: +371 (0)6 / 784 2280 Fax: +371 (0)6 / 784 2281	LATVIA	Beijer Electronics Automation AB Box 426 <b>SE-20124 Malmö</b> Phone: +46 (0)40 / 35 86 00 Fax: +46 (0)40 / 93 23 01	
Mitsubishi Electric Corporation Tokyo Building 2-7-3 Marunouchi, Chiyoda-ku <b>Tokyo 100-8310</b> Phone: +81 (3) 3218-2111 Fax: +81 (3) 3218-2185	JAPAN	PROVENDOR OY Teljankatu 8 A3 <b>FIN-28130 Pori</b> Phone: +358 (0)2 / 522 3300 Fax: +358 (0)2 / 522 3322	FINLAND	UTECO A.B.E.E. 5, Mavrogenous Str. <b>GR-18542 Piraeus</b> Phone: +30 (0)211 / 1206-900 Fax: +30 (0)211 / 1206-999	GREECE	000 "CSC-AUTOMATION" 4-B, M. Raskovoy St. <b>UA-02660 Kiev</b> Phone: +380 (0)44 / 494 33 44 Fax: +380 (0)44 / 494 33 66	
Mitsubishi Electric Automation, Inc. 500 Corporate Woods Parkway <b>Vernon Hills, IL 60061</b> Phone: +1 (847) 478-2100 Fax: +1 (847) 478-0328	USA	PROVENDOR OY Teljankatu 8 A3 <b>FIN-28130 Pori</b> Phone: +358 (0)2 / 522 3300 Fax: +358 (0)2 / 522 3322	FINLAND	MELTRADE Kft. Fertő utca 14. <b>HU-1107 Budapest</b> Phone: +36 (0)1 / 431-9726 Fax: +36 (0)1 / 431-9727	HUNGARY	000 "CSC-AUTOMATION" 4-B, M. Raskovoy St. <b>UA-02660 Kiev</b> Phone: +380 (0)44 / 494 33 44 Fax: +380 (0)44 / 494 33 66	
Mitsubishi Electric Europe B.V. Gothaer Straße 8 <b>D-40880 Ratingen</b> Phone: +49 (0)2102 / 486-0 Fax: +49 (0)2102 / 486-1120	EUROPE	GEVA Wiener Straße 89 <b>A-2500 Baden</b> Phone: +43 (0)2252 / 85 55 20 Fax: +43 (0)2252 / 488 60	AUSTRIA	Beijer Electronics UAB Goštautų g. 3 <b>LT-48324 Kaunas</b> Phone: +370 37 262707 Fax: +370 37 455605	LITHUANIA	TOO Kazpromavtomatika UL. ZHAMBYLA 28, <b>KAZ-00017 Karaganda</b> Phone: +7 7212 / 50 10 00 Fax: +7 7212 / 50 11 50	KAZAKHSTAN
Mitsubishi Electric Europe B.V. Radlická 751/113e Avenir Business Park <b>CZ-158 00 Praha 5</b> Phone: +420 251 551 470 Fax: +420 251 551 471	CZECH REP.	OOO TECHNIKON Prospect Nezavisimosti 177-9 <b>BY-220125 Minsk</b> Phone: +375 (0)17 / 393 1177 Fax: +375 (0)17 / 393 0081	BELARUS	ALFATRADE Ltd. 99, Paola Hill <b>Malta-Paola PLA 1702</b> Phone: +356 (0)21 / 697 816 Fax: +356 (0)21 / 697 817	MALTA	I.C. SYSTEMS Ltd. 23 Al-Saad-Al-Alee St. <b>EG-Sarayat, Maadi, Cairo</b> Phone: +20 (0) 2 / 235 98 548 Fax: +20 (0) 2 / 235 96 625	Egypt
Mitsubishi Electric Europe B.V. 25, Boulevard des Bouvets <b>F-92741 Nanterre Cedex</b> Phone: +33 (0)1 / 55 68 55 68 Fax: +33 (0)1 / 55 68 57 57	FRANCE	ESCO DRIVES Culliganlaan 3 <b>BE-1831 Diegem</b> Phone: +32 (0)2 / 717 64 60 Fax: +32 (0)2 / 717 64 61	BELGIUM	INTEHSIS SRL bld. Traian 23/1 <b>MD-2060 Kishinev</b> Phone: +373 (0)22 / 66 4242 Fax: +373 (0)22 / 66 4280	MOLDOVA	SHERF Motion Techn. Ltd. Rehov Hamerkava 19 <b>IL-58851 Holon</b> Phone: +972 (0)3 / 559 54 62 Fax: +972 (0)3 / 556 01 82	ISRAEL
Mitsubishi Electric Europe B.V. Westgate Business Park, Ballymount <b>IRL-Dublin 24</b> Phone: +353 (0)1 4198800 Fax: +353 (0)1 4198890	IRELAND	KONING & HARTMAN B.V. Woluweelaan 31 <b>BE-1800 Vilvoorde</b> Phone: +32 (0)2 / 257 02 40 Fax: +32 (0)2 / 257 02 49	BELGIUM	HIFLEX AUTOM. B.V. Wolweverstraat 22 <b>NL-2984 CD Ridderkerk</b> Phone: +31 (0)180 / 44 60 04 Fax: +31 (0)180 / 44 23 55	NETHERLANDS	CEG LIBAN Cebaco Center/Block A Autostrade DORA <b>Lebanon-Beirut</b> Phone: +961 (0)1 / 240 445 Fax: +961 (0)1 / 240 193	LEBANON
Mitsubishi Electric Europe B.V. Viale Colleoni 7 Palazzo Sirio <b>I-20864 Agrate Brianza (MB)</b> Phone: +39 039 / 60 53 1 Fax: +39 039 / 60 53 312	ITALY	INEA RBT d.o.o. Stegne 11 <b>SI-1000 Ljubljana</b> Phone: +386 (0)1 / 513 8116 Fax: +386 (0)1 / 513 8170	BOSNIA AND HERZEGOVINA	IMTECH MARINE & OFFSHORE B.V. Sluisjesdijk 155 <b>NL-3087 AG Rotterdam</b> Phone: +31 (0)10 / 487 19 11 Fax: +31 (0)10 / 487 1692	NETHERLANDS	ADROIT TECHNOLOGIES 20 Waterford Office Park 189 Witkoppen Road <b>ZA-Fourways</b> Phone: +27 (0)11 / 658 8100 Fax: +27 (0)11 / 658 8101	SOUTH AFRICA
Mitsubishi Electric Europe B.V. Nijverheidsweg 23a <b>NL-3641 RP Mijdrecht</b> Phone: +31 (0) 297250350	NETHERLANDS	AKHNATON 4, Andrei Ljapchev Blvd., PO Box 21 <b>BG-1756 Sofia</b> Phone: +359 (0)2 / 817 6000 Fax: +359 (0)2 / 97 44 06 1	BULGARIA	KONING & HARTMAN B.V. Energieweg 1 <b>NL-2627 AP Delft</b> Phone: +31 (0)15 260 99 06 Fax: +31 (0)15 261 9194	NETHERLANDS	Beijer Electronics AS Postboks 487 <b>NO-3002 Drammen</b> Phone: +47 (0)32 / 24 30 00 Fax: +47 (0)32 / 84 85 77	
Mitsubishi Electric Europe B.V. ul. Krakowska 50 <b>PL-32-083 Balice</b> Phone: +48 (0) 12 630 47 00 Fax: +48 (0) 12 630 47 01	POLAND	INEA CR Losinjska 4 a <b>HR-1000 Zagreb</b> Phone: +385 (0)1 / 36 940 -01 / -02 / -03 Fax: +385 (0)1 / 36 940 -03	CROATIA	AutoCont C. S. S.R.O. Kafkova 1853/3 <b>CZ-702 00 Ostrava 2</b> Phone: +420 595 691 150 Fax: +420 595 691 199	CZECH REPUBLIC	Fonseca S.A. R. João Francisco do Casal 87/89 <b>PT-3801-997 Aveiro, Esgueira</b> Phone: +351 (0)234 / 303 900 Fax: +351 (0)234 / 303 910	
Mitsubishi Electric Europe B.V. 52, bld. 3 Kosmodamianskaya nab 8 floor <b>RU-115054 Moscow</b> Phone: +7 495 / 721 2070 Fax: +7 495 / 721 2071	RUSSIA	AutoCont C. S. S.R.O. Kafkova 1853/3 <b>CZ-702 00 Ostrava 2</b> Phone: +420 595 691 150 Fax: +420 595 691 199	CZECH REPUBLIC	INEA SR d.o.o. Kafkova 1853/3 <b>CZ-702 00 Ostrava 2</b> Phone: +420 595 691 150 Fax: +420 595 691 199	CZECH REPUBLIC	Portuguese Representative R. João Francisco do Casal 87/89 <b>PT-3801-997 Aveiro, Esgueira</b> Phone: +351 (0)234 / 303 900 Fax: +351 (0)234 / 303 910	
Mitsubishi Electric Europe B.V. Carretera de Rubí 76-80 Apdo. 420 <b>E-08190 Sant Cugat del Vallés (Barcelona)</b> Phone: +34 (0) 93 / 5653131 Fax: +34 (0) 93 / 5891579	SPAIN	AutoCont C. S. S.R.O. Kafkova 1853/3 <b>CZ-702 00 Ostrava 2</b> Phone: +420 595 691 150 Fax: +420 595 691 199	CZECH REPUBLIC	INEA SR d.o.o. Theilgaards Torv 1 <b>DK-4000 Roskilde</b> Phone: +45 (0)46 / 75 76 66 Fax: +45 (0)46 / 75 56 26	DENMARK	SIRIUS TRADING & SERVICES SRL Allee Lacul Morii Nr. 3 <b>RO-060841 Bucuresti, Sector 6</b> Phone: +40 (0)21 / 430 40 06 Fax: +40 (0)21 / 430 40 02	
Mitsubishi Electric Europe B.V. Fjellevägen 8 <b>SE-22736 Lund</b> Phone: +46 (0) 8 625 10 00 Fax: +46 (0) 46 39 70 18	SWEDEN	AutoCont C. S. S.R.O. Kafkova 1853/3 <b>CZ-702 00 Ostrava 2</b> Phone: +420 595 691 150 Fax: +420 595 691 199	CZECH REPUBLIC	INEA SR d.o.o. Theilgaards Torv 1 <b>DK-4000 Roskilde</b> Phone: +45 (0)46 / 75 76 66 Fax: +45 (0)46 / 75 56 26	DENMARK	SIRIUS TRADING & SERVICES SRL Allee Lacul Morii Nr. 3 <b>RO-060841 Bucuresti, Sector 6</b> Phone: +40 (0)21 / 430 40 06 Fax: +40 (0)21 / 430 40 02	
Mitsubishi Electric Turkey Elektrik Ürünleri A.Ş. Fabrika Otomasyonu Merkezi Şerifali Mahallesi Nutuk Sokak No.5 <b>TR-34775 Ümraniye-İSTANBUL</b> Phone: +90 (0)216 / 526 39 90 Fax: +90 (0)216 / 526 39 95	TURKEY	AutoCont C. S. S.R.O. Kafkova 1853/3 <b>CZ-702 00 Ostrava 2</b> Phone: +420 595 691 150 Fax: +420 595 691 199	CZECH REPUBLIC	INEA SR d.o.o. Theilgaards Torv 1 <b>DK-4000 Roskilde</b> Phone: +45 (0)46 / 75 76 66 Fax: +45 (0)46 / 75 56 26	DENMARK	SIRIUS TRADING & SERVICES SRL Allee Lacul Morii Nr. 3 <b>RO-060841 Bucuresti, Sector 6</b> Phone: +40 (0)21 / 430 40 06 Fax: +40 (0)21 / 430 40 02	
Mitsubishi Electric Europe B.V. Travellers Lane <b>UK-Hatfield, Herts. AL10 8XB</b> Phone: +44 (0)1707 / 28 87 80 Fax: +44 (0)1707 / 27 86 95	UK	AutoCont C. S. S.R.O. Kafkova 1853/3 <b>CZ-702 00 Ostrava 2</b> Phone: +420 595 691 150 Fax: +420 595 691 199	CZECH REPUBLIC	INEA SR d.o.o. Theilgaards Torv 1 <b>DK-4000 Roskilde</b> Phone: +45 (0)46 / 75 76 66 Fax: +45 (0)46 / 75 56 26	DENMARK	OMNI RAY AG Im Schörli 5 <b>CH-8600 Dübendorf</b> Phone: +41 (0)44 / 802 28 80 Fax: +41 (0)44 / 802 28 28	
Mitsubishi Electric Europe B.V. Dubai Silicon Oasis <b>United Arab Emirates - Dubai</b> Phone: +971 4 3724716 Fax: +971 4 3724721	UAE	AutoCont C. S. S.R.O. Kafkova 1853/3 <b>CZ-702 00 Ostrava 2</b> Phone: +420 595 691 150 Fax: +420 595 691 199	CZECH REPUBLIC	INEA SR d.o.o. Theilgaards Torv 1 <b>DK-4000 Roskilde</b> Phone: +45 (0)46 / 75 76 66 Fax: +45 (0)46 / 75 56 26	DENMARK	OMNI RAY AG Im Schörli 5 <b>CH-8600 Dübendorf</b> Phone: +41 (0)44 / 802 28 80 Fax: +41 (0)44 / 802 28 28	
Mitsubishi Electric Corporation Tokyo Building 2-7-3 Marunouchi, Chiyoda-ku <b>Tokyo 100-8310</b> Phone: +81 (3) 3218-2111 Fax: +81 (3) 3218-2185	JAPAN	AutoCont C. S. S.R.O. Kafkova 1853/3 <b>CZ-702 00 Ostrava 2</b> Phone: +420 595 691 150 Fax: +420 595 691 199	CZECH REPUBLIC	UTECO A.B.E.E. 5, Mavrogenous Str. <b>GR-18542 Piraeus</b> Phone: +30 (0)211 / 1206-900 Fax: +30 (0)211 / 1206-999	GREECE	UTECO A.B.E.E. 5, Mav	